

Rhythm C MAJOR DIATONIC


Features:

- HDPE Frame
- Coated Fiberglass Bars Stainless Steel Hardware

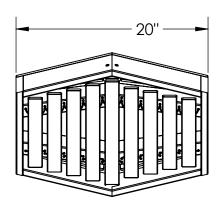

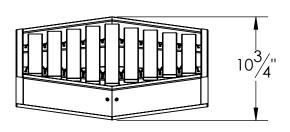



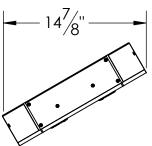



FREENOTES HARMONY PARK 194 BODO DRIVE, UNIT F DURANGO CO 81303 TEL: (970) 375-7825 FAX: (970) 247-0856 EMAIL: INFO@FREENOTESHARMONYPARK.COM WWW.FREENOTESHARMONYPARK.COM

PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF FREENOTES HARMONY PARK, ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF FREENOTES HARMONY PARK IS PROHIBITED.

Rhythm 2017 - Installation Guide

REVISION: A

SCALE: 1:10

SHEET 1 OF 5

MOUNTING OPTION IDENTIFICATION:

This instrument is offered with various mounting options. Identify your option below and follow installation instructions on the following sheets.

Recycled Post In-Ground Sheet 4 of 5




Parts List:

- ☐ Instrument Assembly (1)
- □ Recycled Post In-Ground (1)
- □ 1 1/4" Tamper-Resistant Screw (5)
- □ Security Driver (1)
- □ Dual Drive #2 Screw (4)
- ☐ Holster (1)

Weights:

Boxed Instrument Weight, 20 lbs. Boxed Post Weight, 28 lbs.

Steel Post In-Ground Sheet 4 of 5

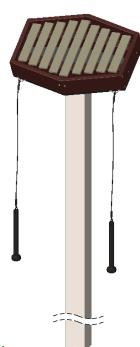

Parts List:

- ☐ Instrument Assembly (1)
- ☐ Steel Post In-Ground (1)
- □ 1" Tamper-Resistant Screw (5)
- □ 10-24 Tap (1)
- □ 11/64" Drill Bit (1)
- ☐ Security Driver (1)
- □ Dual Drive #2 Screw (4)
- ☐ Holster (1)

Weights:

Boxed Instrument Weight, 20 lbs. Boxed Post Weight, 36 lbs.

Recycled Post Surface Mount Sheet 5 of 5



Parts List:

- ☐ Instrument Assembly (1)
- Recycled Post Surface Mount (1)
- □ 1 1/4" Tamper-Resistant Screw (5)
- ☐ Security Driver (1)
- $\square \emptyset 3/8" \times 5"$ Anchor Bolt (4)
- ☐ Plastic Anchor Cap (4)
- □ Dual Drive #2 Screw (4)
- ☐ Holster (1)

Weights:

Boxed Instrument Weight, 20 lbs. Boxed Post Weight, 20 lbs.

Steel Post Surface Mount Sheet 5 of 5



Parts List:

- ☐ Instrument Assembly (1)
- ☐ Steel Post Surface Mount (1)
- □ 1" Tamper-Resistant Screw (5)
- □ 10-24 Tap (1)
- □ 11/64" Drill Bit (1)
- ☐ Security Driver (1)
- $\Box \emptyset 3/8" \times 3 3/4"$ Anchor Bolt (4)
- ☐ Plastic Anchor Cap (4)
- □ Dual Drive #2 Screw (4)
- ☐ Holster (1)

Weights:

Boxed Instrument Weight, 20 lbs. Boxed Post Weight, 35 lbs.



EREENOTES HARMONY PARK
194 BODO DRIVE, UNIT F
DURANGO CO 81303
TEL: (970) 375-7825
FAX: (970) 247-0856
EMAIL: INFO@FREENOTESHARMONYPARK.COM
WWW.REENOTESHARMONYPARK.COM

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
FREENOTES HARMONY PARK. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
FREENOTES HARMONY PARK IS
PROPULIFIED.

Rhythm 2017 - Installation Guide

REVISION: A


SCALE: 1:16


SHEET 2 OF 5

HOLSTER AND INSTRUMENT TO POST INSTALLATION PROCEDURES

- **Step 1:** Align Holster with instrument back with the corresponding arrows. Fasten Holster to back with the provided dual drive screws. Backs are predrilled. Screw heads should be flush with the Holster surface when properly installed. Holster must also be flush along the back. An extended square drive or Phillips will be needed. Drive screws in slowly to prevent stripping.
- **Step 2: (Recycled Post Only)** With two people, situate the instrument onto the posts. Predrill 1/8" pilot holes into the posts through the existing holes on the instrument holster. Fasten the instrument to the posts with the provided 1 1/4" tamper-resistant screws and security driver.

(Steel Post Only) With two people, situate the instrument onto the posts. Predrill 11/64" pilot holes into the posts through the existing holes on the instrument holster. Next tap the holes with the provided 10-24 Tap, the Tap may be used with a cordless drill. Last fasten the instrument to the posts with the provided 1" tamper-resistant screws and security driver.

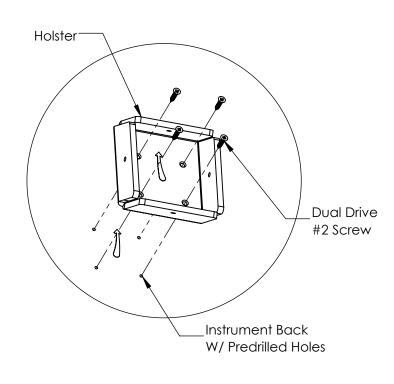

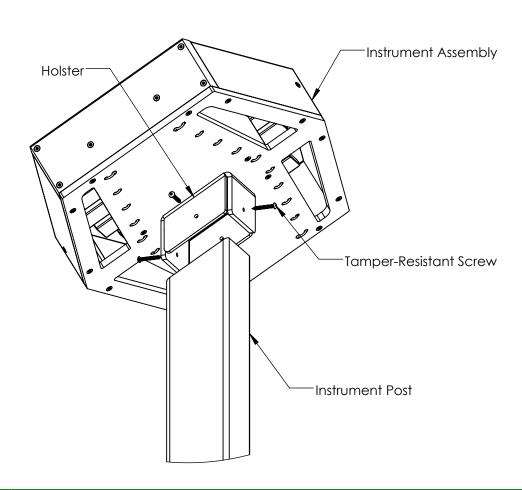



EREENOTES HARMONY PARK
194 BODO DRIVE, UNIT F
DURANGO CO 81303
TEL: (970) 375-7825
FAX: (970) 247-0856
EMAIL: INFO@FREENOTESHARMONYPARK.COM
WWW.FREENOTESHARMONYPARK.COM

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
FREENOTES HARMONY PARK. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
FREENOTES HARMONY PARK IS
PROHIBITED.

Rhythm 2017 - Installation Guide

REVISION: A

SCALE: 1:5

SHEET 3 OF 5

RECYCLED AND STEEL POST IN-GROUND INSTALLATION PROCEDURES

Step 1: Excavate one 10" diameter hole, 36" deep at the installation location. Contractor can modify post to desired height.


Post Length = Frost Depth (36" Recommended) + Finished Height

Finished Height Guideline: (Ages 3-5, 22") (Ages 5-7, 27") (Ages 7-11, 32") (Adult, 36")

Step 2: Lower the post into the excavated hole.

Step 3: Verify the correct placement, levelness, plumbness, and finished height of the instrument. Also check for sufficient clearance around the instrument. A 36" radius is recommended around the instrument for wheelchair accessibility, however this is not required for instrument function. Instrument may be installed next to a wall or in a variety of different configurations.

Step 4: Last pour concrete around the post. It is recommended to brace the instrument to hold it rigid while the concrete cures. Leave to set according to the concrete manufacturers guidelines. Approximately (2) 80lb. bags will be needed.

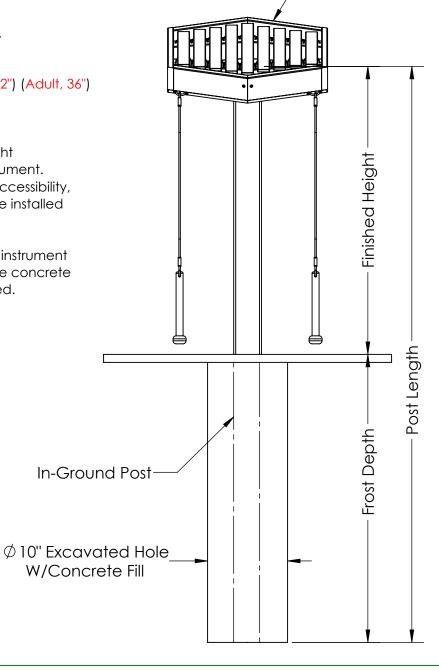



FREENOTES HARMONY PARK
194 BODO DRIVE, UNIT F
DURANGO CO 81303
TEL: (970) 375-7825
FAX: (970) 247-0856
EMAIL: INFO@FREENOTESHARMONYPARK.COM
WWW.FREENOTESHARMONYPARK.COM

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
FREENOTES HARMONY PARK. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
FREENOTES HARMONY PARK IS
PROHIBITED.

Rhythm 2017 - Installation Guide

REVISION: A


SCALE: 1:12

SHEET 4 OF 5

Instrument Assembly

RECYCLED AND STEEL POST SURFACE MOUNT INSTALLATION PROCEDURES

- **Step 1:** Standard height for Surface Mount Posts is 36". Steel Post height can not be adjusted. The Recycled Posts may be modified in the field to the following heights: (Ages 3-5, 22") (Ages 5-7, 27") (Ages 7-11, 32") (Adult, 36")
- **Step 2:** Determine installation location. Verify concrete footing is a minimum of 6" thick. If the concrete pad is at an angle, steel washers are required to act as shims. (Shims not provided)
- **Step 3:** Stand the surface mount post upright onto the concrete pad. Mark the center of the holes on the surface mount plate. After you have made your marks, set aside the post in order to drill for anchor holes. With a hammer or rotary drill, drill through concrete at marked locations. Drill to a minimum depth of 4". A 3/8" masonry drill bit will be needed.
- **Step 4:** Place the surface mounted post back over the drilled out holes. Insert provided anchor bolts into aligned holes. Position anchor nut so that it is flush with the top of the bolt. Pound anchor bolts into the hole until the anchor washer is flush with the post base. Tighten anchor bolts until they are snug. Cover remaining bolt sections with provided plastic caps.
- **Step 5:** Verify the correct placement, levelness, plumbness, and finished height of the instrument. Also check for sufficient clearance around the instrument. A 36" radius is recommended around the instrument for wheelchair accessibility, however this is not required for instrument function. Instrument may be installed next to a wall or in a variety of different configurations.

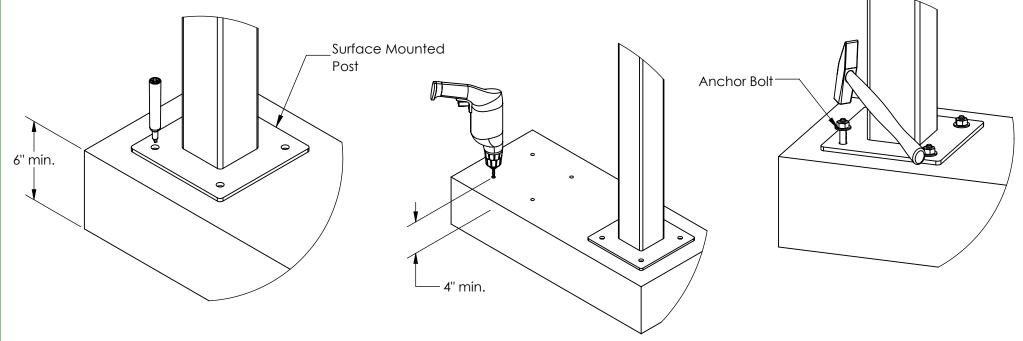



EREENOTES HARMONY PARK
194 BODO DRIVE, UNIT F
DURANGO CO 81303
TEL: (970) 375-7825
FAX: (970) 247-0856
EMAIL: INFO@FREENOTESHARMONYPARK.COM
WWW.FREENOTESHARMONYPARK.COM

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
FREENOTES HARMONY PARK. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
FREENOTES HARMONY PARK IS
PROHIBITED.

Rhythm 2017 - Installation Guide

REVISION: A

SCALE: 1:6

SHEET 5 OF 5